

Table des matières

- 1 - How to choose the default card to Arduino MEGA 3**
- 2 - How to choose the default blocks categories 3**

1 - How to choose the default card to Arduino MEGA

You have to edit the file:

```
/generators/arduino/blocklyduino.js
```

and modify the *line 93*:

```
profile["default"] = profile["arduino_uno"];
```

changing **arduino_uno** by **arduino_mega**.

2 - How to choose the default blocks categories

You have to modify the file `/utils/blocklyDuino.js` at *line 479*.

You can find the list of blocks categories at `LoadIds =` line:

```
// set the default toolbox if none in session
if (loadIds === undefined || loadIds === "") {
loadIds =
"CAT_LOGIC,CAT_LOOPS,CAT_VARIABLES,CAT_FUNCTIONS,CAT_MATH,CAT_TEXT,CAT_ARDUI
NO,CAT_TECHNOZONE";
window.sessionStorage.toolboxids = loadIds;
}
```

You can find the categories list name to write at line **LoadIds** in the file `index.html` starting *line 246* in "toolboxes definitions" .

From:

<https://wiki.libreeduc.cc/> - **LibrEduc**

Permanent link:

https://wiki.libreeduc.cc/en:blockly_rduino:tweak

Last update: **2025/01/16 20:24**

